



## *Technical Newsletter*

### **CHECKING SPINDEL SO-40A**

During maintenance you have to check if there is play in the spindel of the SO-40a. Because when the play is too much it can damage the Opto-coupler. Check if the Opto-coupler disk is touching the Opto-coupler and if so please adjust the play in the following way.

“American shake-frame  
Till April 1998



- Loosen screws of bearing
- Place Spacer of 1-2 mm between Bearing and frame
- Fasten screws again
- Check/adjust Opto-coupler



“American shake-frame”

“European shake-frame”  
From April 1998 till now



- Loosen screw
- Turn nut to the right
- Fasten screw again
- Check/adjust Opto-coupler

For more information please contact our Service Department at:

Telephone: 0031-(0)252 240 842

Fax: 0031-(0)252 240 882

E-mail: SERVICE@FLUIDMAN.NL