
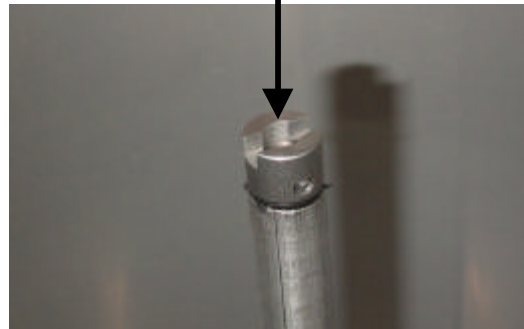


Technical Newsletter

CHANGING A POM INTO A STAINLESS STEEL AGITATOR

Problem: Changing a POM agitator into a steel agitator (3 ltr or 6 ltr.)
Only possible with stainless-steel canisters.

How: Take PIN,SPINROL (drawing 2751 part 17) out of agitation shaft
Place BUSH,CENTER (drawing 2751 part 9).
Place PIN,SPINROL back into the agitation shaft
Place POM agitator 3 Ltr or 6 Ltr. (drawing 2751 partno.1803439-SP or 1803441-SP)

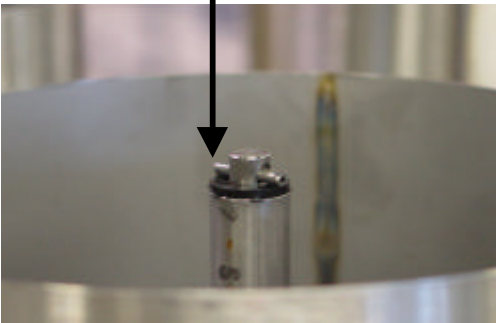

Parts needed:

1860110-SP PIN,SPINROL

1801798-SP BUSH,CENTER

1803439-SP AGITATOR, ASSY 3 L (HA-m/l)

1803441-SP AGITATOR, ASSY 6 L (HA-m/l)

1803435-SP AGITATOR, ASSY 2,5 L (HA-s)

1803437-SP AGITATOR, ASSY 5 L (HA-s)

For changing from stainless steel to POM use instruction in reversed order.

For more information please contact our Service Department at:

Telephone: 0031-(0)252 240 842

Fax: 0031-(0)252 240 882

E-mail: SERVICE@FLUIDMAN.NL